Initial Setup Guide

AV Receiver

DRX-5.4










https://integraworldwide.com/manual/drx54/top.pdf


This document uses a 7.1 channel system as an example when describing use. Refer to the online instruction manual when using other than a 7.1 channel system. There are also descriptions for using the multi-zone feature and other detailed operating instructions.

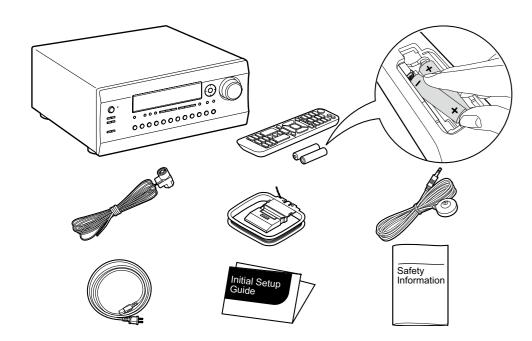

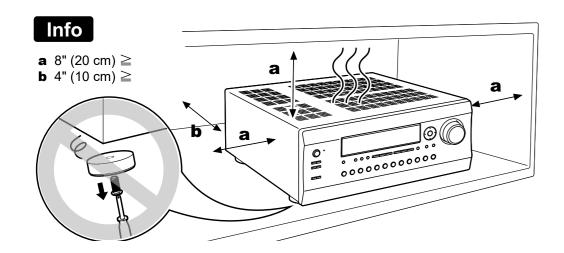


STEP

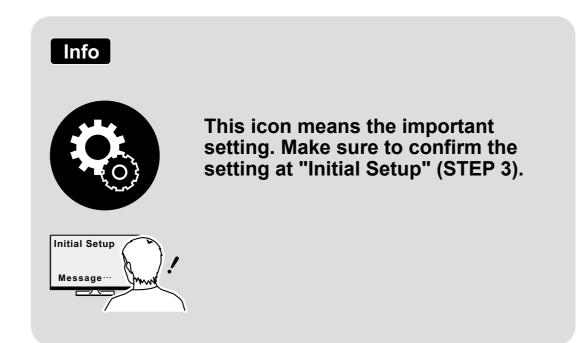

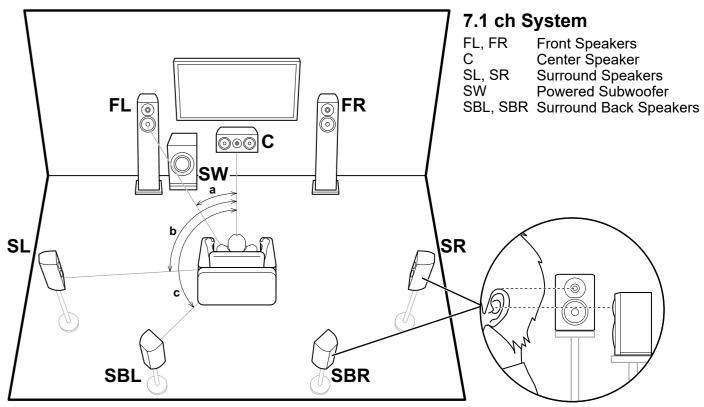



Integra

a: 22° to 30°, b: 90° to 110°, c: 135° to 150°

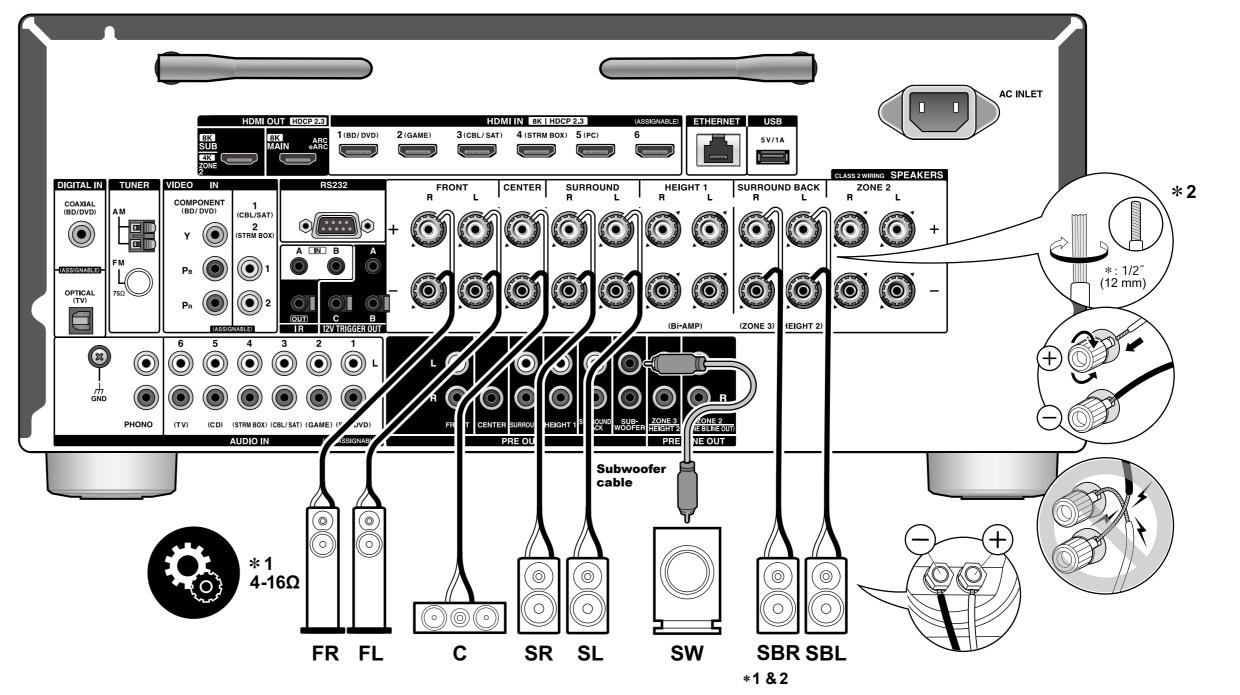


Connect speakers with 4 Ω to 16 Ω impedance. Twist the ends of the speaker cable wires tightly.

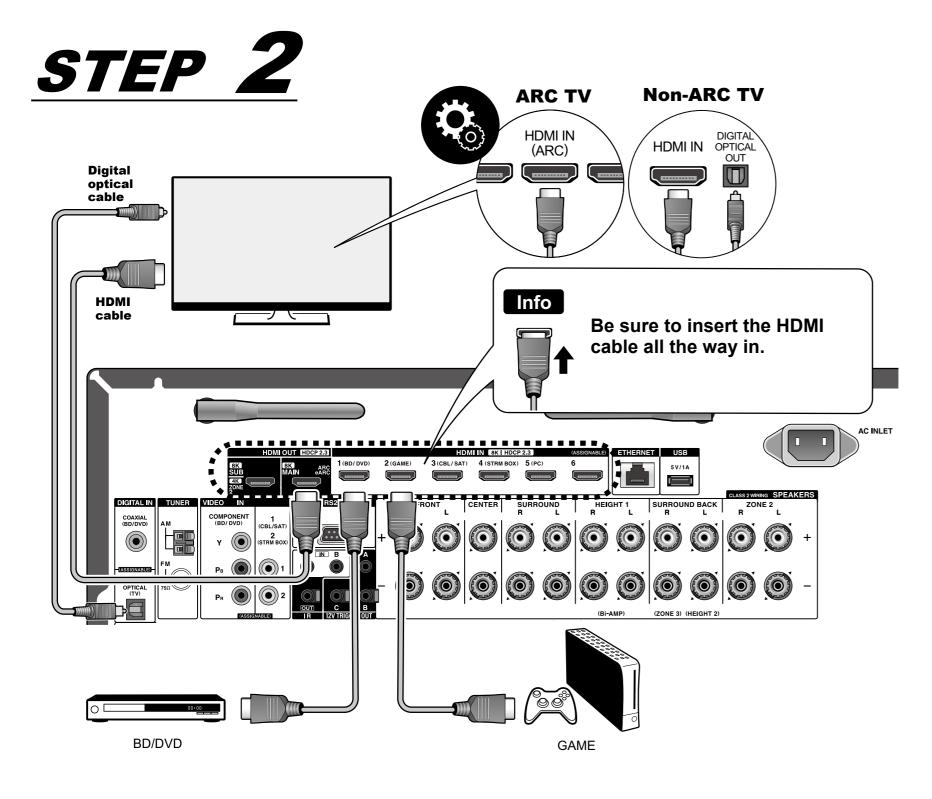


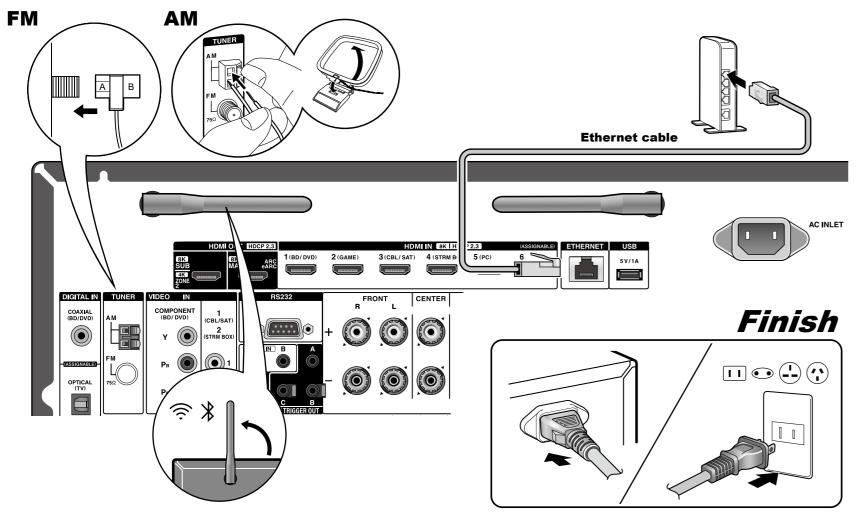


STEP 3

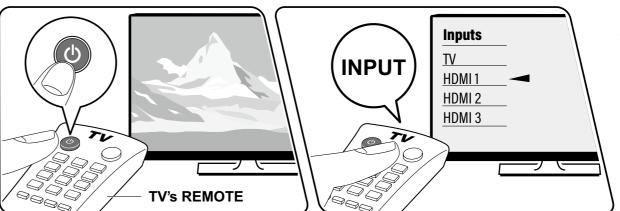

Switch the input on the TV to that assigned to the unit.

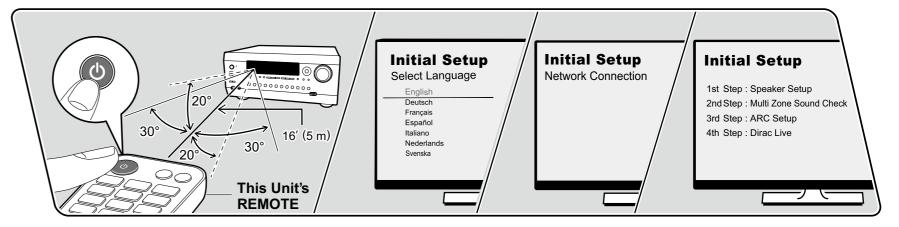

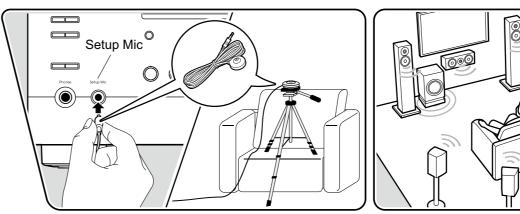

To redo the initial setup

"8.Miscellaneous"

□ "Initial Setup"

Info

Troubleshooting

Try restarting the unit. Switch this unit to standby, then do **1**. If the problem is not fixed, try the following:

- Unplugging the power cord and HDMI cables then replugging them in again
- Initializing the settings (do ② while this unit is ON)
- Updating the firmware

